


Central Marble Products, Inc.

320-393-2085 FAX: 320-393-4610 TOLL FREE: 1-800-422-0356
1266 105th Street NW • P.O. Box 357 • Rice, MN 56367



Installation Instructions for Standard One Piece Cultured Marble/Granite Shower Base

1. Check rough opening width, must be 1/8" wider than shower base being installed.
2. Make sure no nail plates or nail heads are sticking out that shower base could hang up on.
3. Check floor area (clean), and remove any uneven areas.
4. Check floor area for levelness. Shower base should sit on floor level, if uneven a thinset may be needed.
5. Inspect shower base thoroughly for any shipping damage or blemish.
6. Walk shower base towards back wall tight, lower front of base towards floor setting firmly to floor.
7. Check shower base for levelness, side to side and front to back **MUST** be level.
8. Apply 1/2" wallboard to studs. Bring it down to 1/2" wide flange. See diagram below.

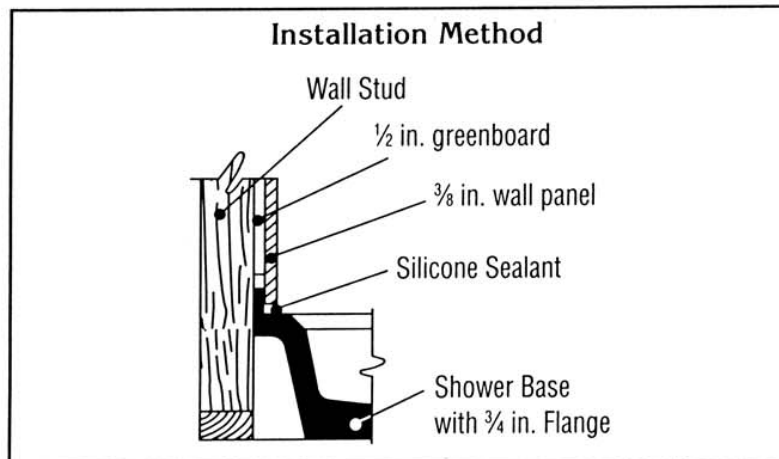

Superior Quality and Service for over 40 Years